


UPPER INSTRUMENT PANEL

PRECAUTION


1. **PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER**
 - (a) Some operations in this section may affect the SRS airbags and seat belt pretensioner. Prior to performing the corresponding operations, read the SRS airbag NOTICE (see page [RS-1](#)).

COMPONENTS

IP

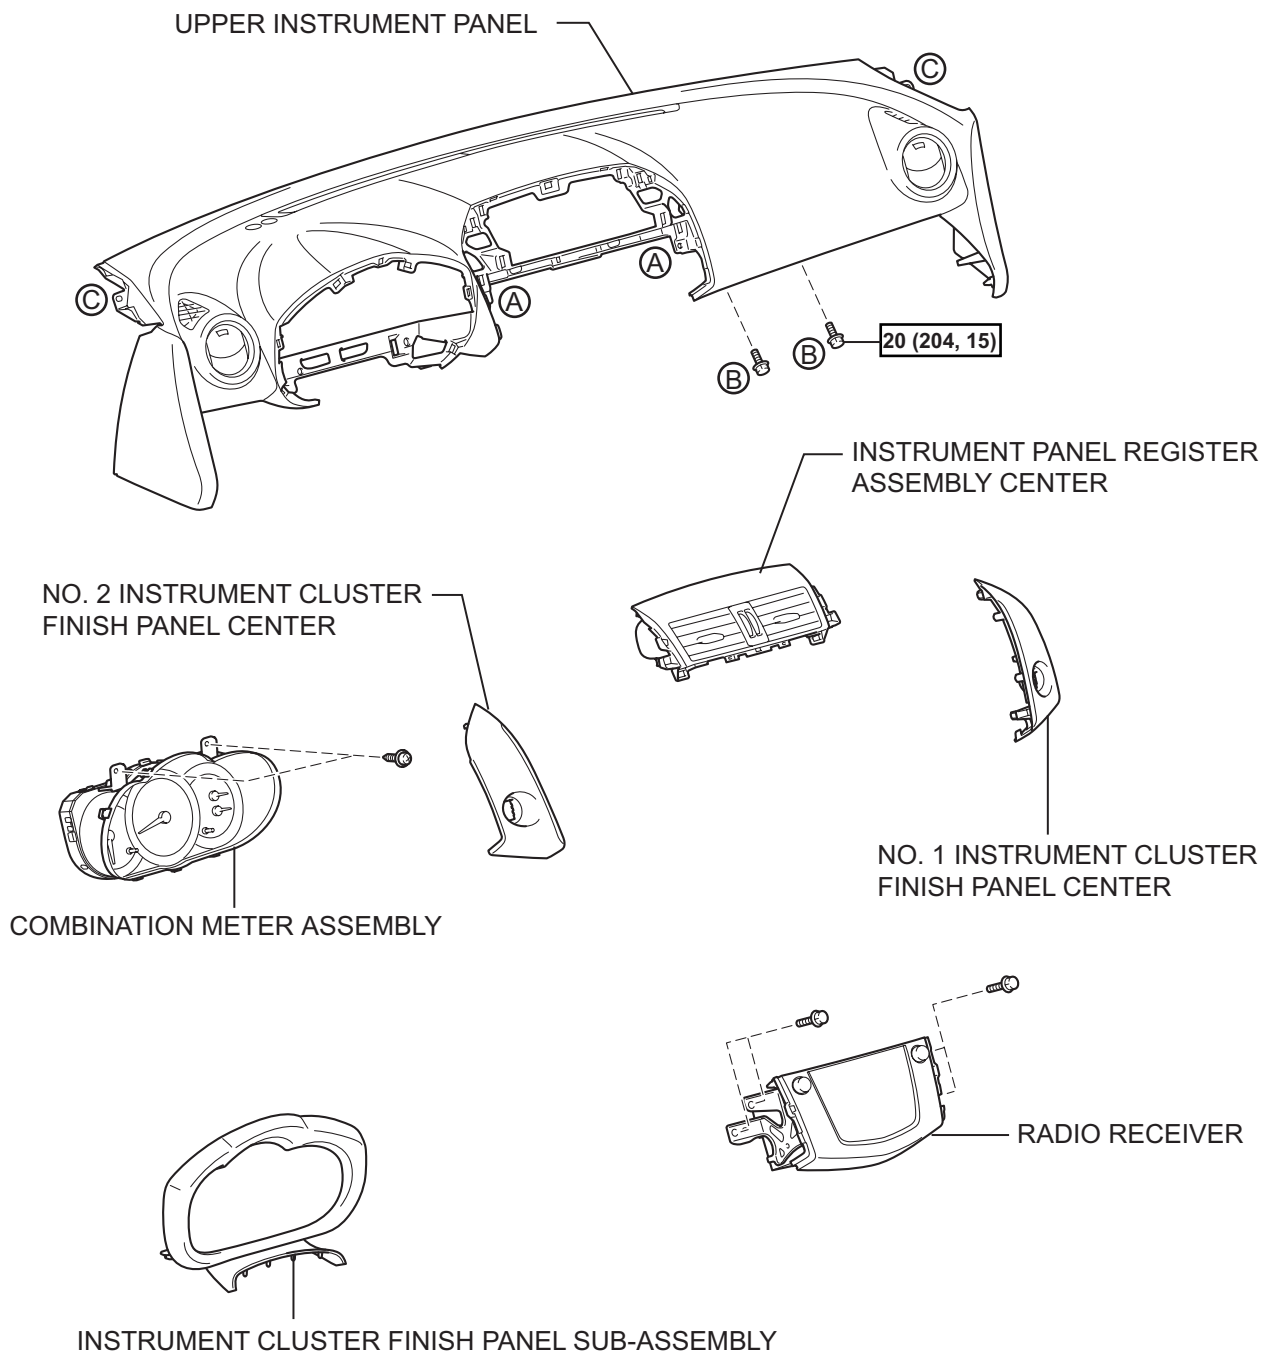

N*m (kgf*cm, ft.*lbf) : Specified torque

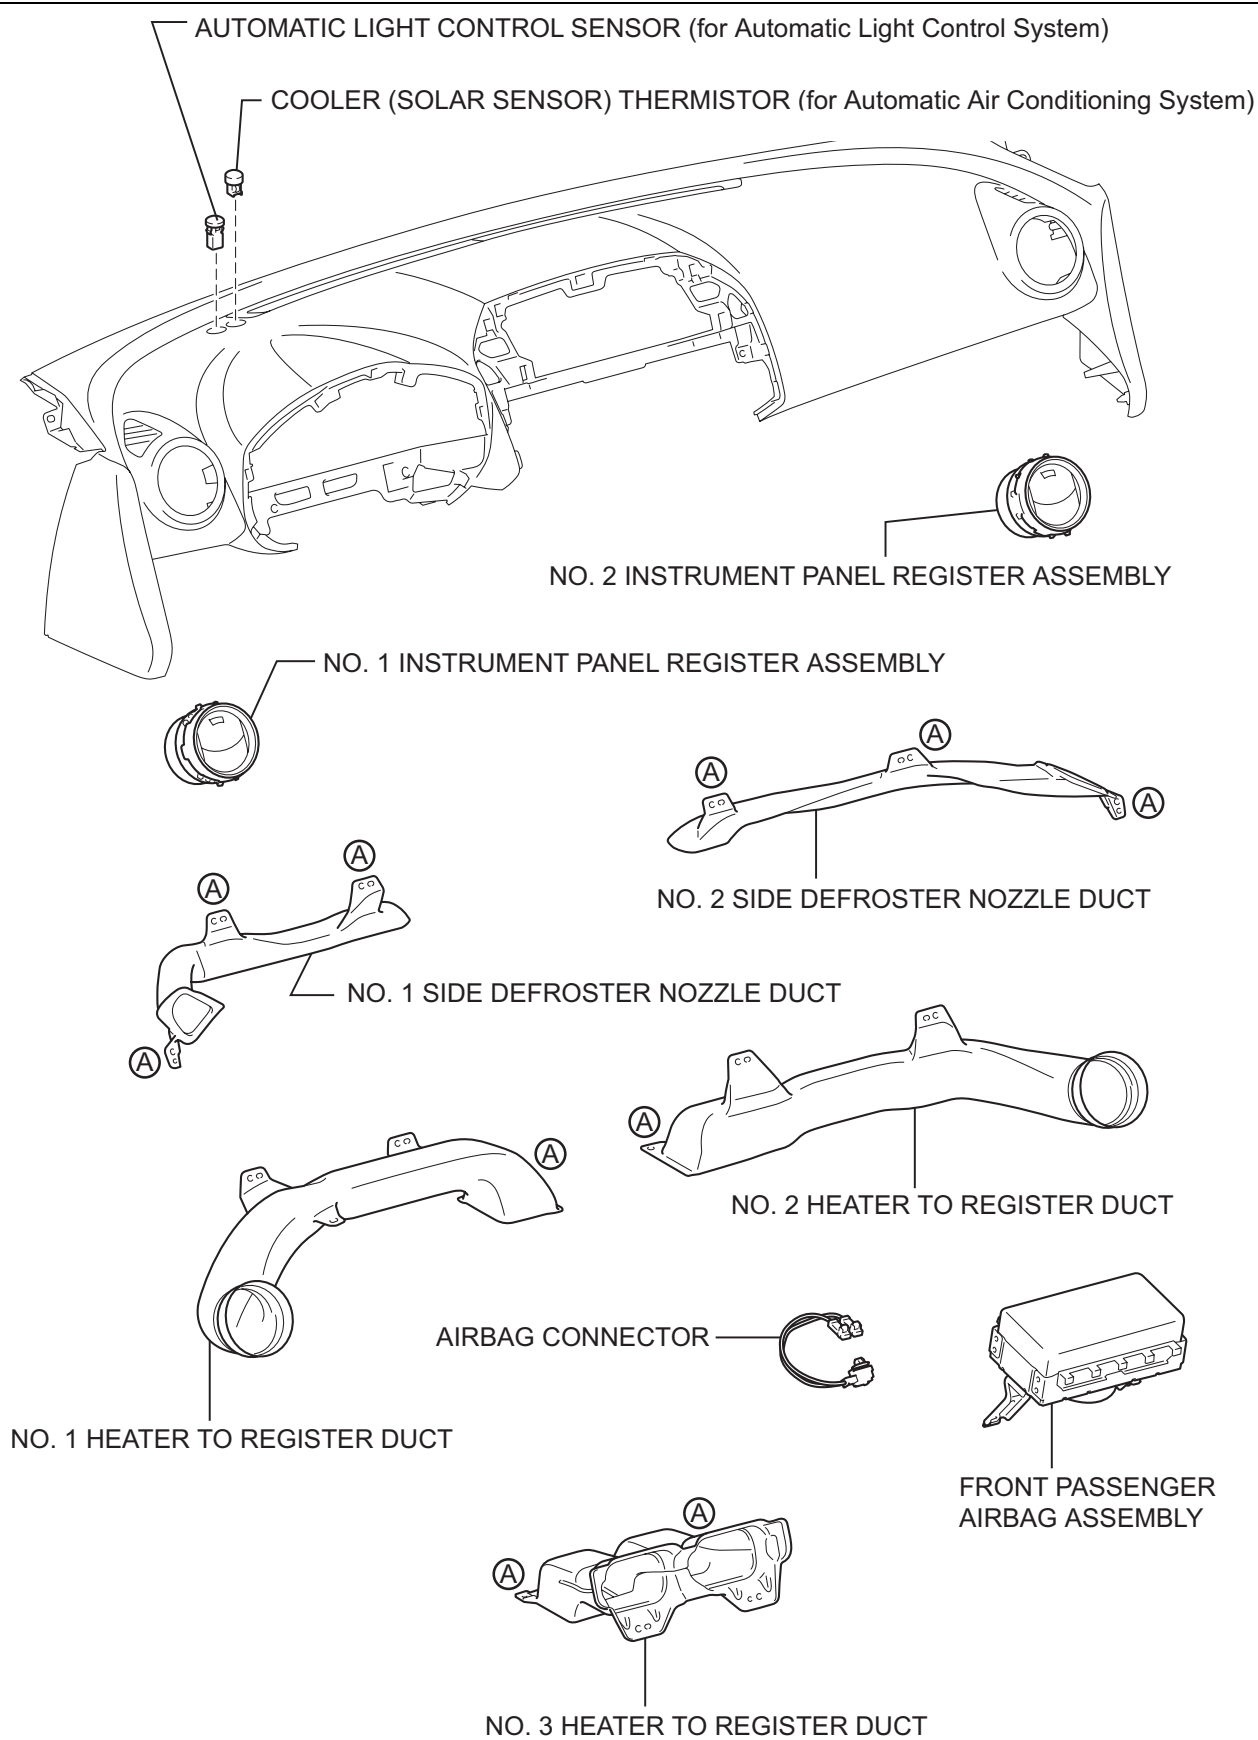

REMOVAL




1. TABLE OF BOLT, SCREW AND NUT

HINT:

All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet codes in the table below.

IP

mm (in.) (L=Length)

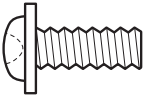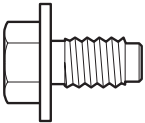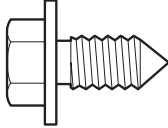Code	Shape	Code	Shape	Code	Shape
A	 <div>φ=5 (0.20) L=14 (0.55)</div>	B	 <div>φ=8 (0.31) L=15 (0.59)</div>	C	 <div>φ=6 (0.24) L=16 (0.63)</div>

G

B129998E05

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


3. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

- (a) Using a screwdriver, detach the 4 clips, 6 claws and remove the instrument cluster finish panel.


HINT:

Tape the screwdriver tip before use.

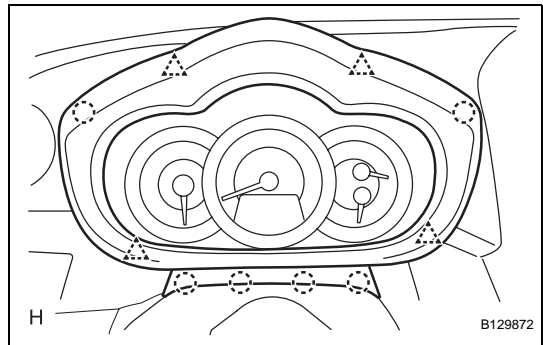

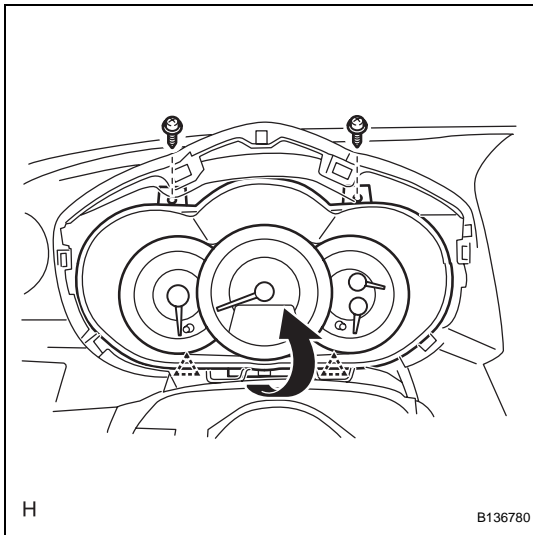**4. REMOVE COMBINATION METER ASSEMBLY**


- (a) Remove the 2 screws.
- (b) Pull the combination meter as indicated by the arrow in the illustration to detach the 2 clips.
- (c) Disconnect the connector and remove the combination meter.

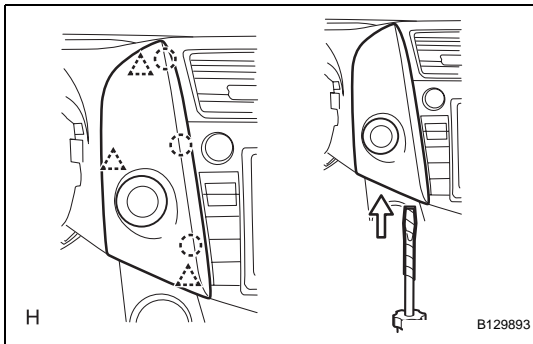**5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER**

- (a) Using a screwdriver, detach the 3 clips, 3claws and remove the cluster finish panel, then disconnect the connector.

HINT:


Tape the screwdriver tip before use.

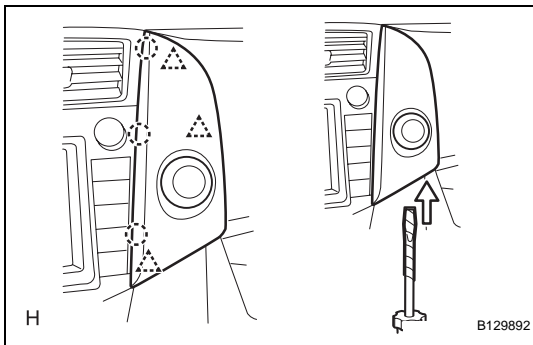**6. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER**


- (a) Using a screwdriver, detach the 3 clips, 3claws and remove the cluster finish panel, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

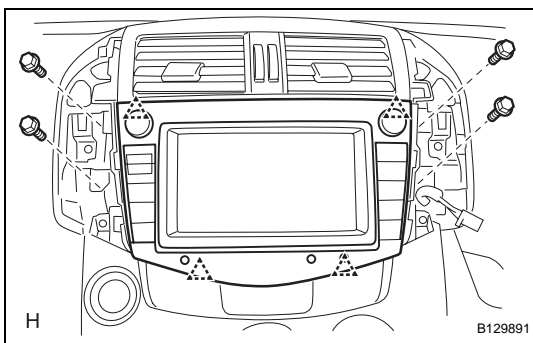**7. REMOVE RADIO RECEIVER**

- (a) Remove the 4 bolts.
- (b) Detach the 4 clips, remove the radio receiver and then disconnect the connectors.

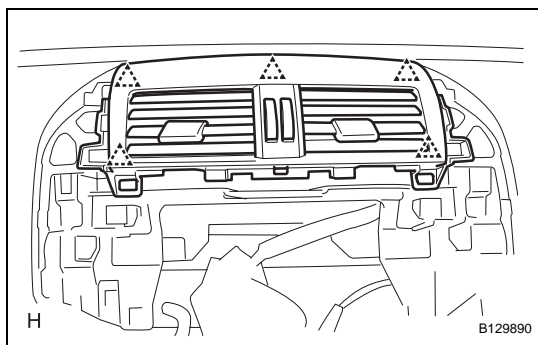

8. REMOVE INSTRUMENT PANEL REGISTER ASSEMBLY CENTER

- (a) Using a screwdriver, detach the 5 clips and remove the instrument panel register.

HINT:

Tape the screwdriver tip before use.



9. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))


10. REMOVE FRONT PILLAR GARNISH LH (See page [IR-27](#))

11. REMOVE FRONT PILLAR GARNISH RH (See page [IR-28](#))

12. REMOVE UPPER INSTRUMENT PANEL

- (a) Remove the 2 bolts from the passenger airbag.
 (b) Disconnect the passenger airbag connector.
 (c) Remove the 2 bolts and 2 screws.
 (d) Disconnect the connectors and clamps.
 (e) Detach the 6 clips and 5 claws and remove the instrument panel.

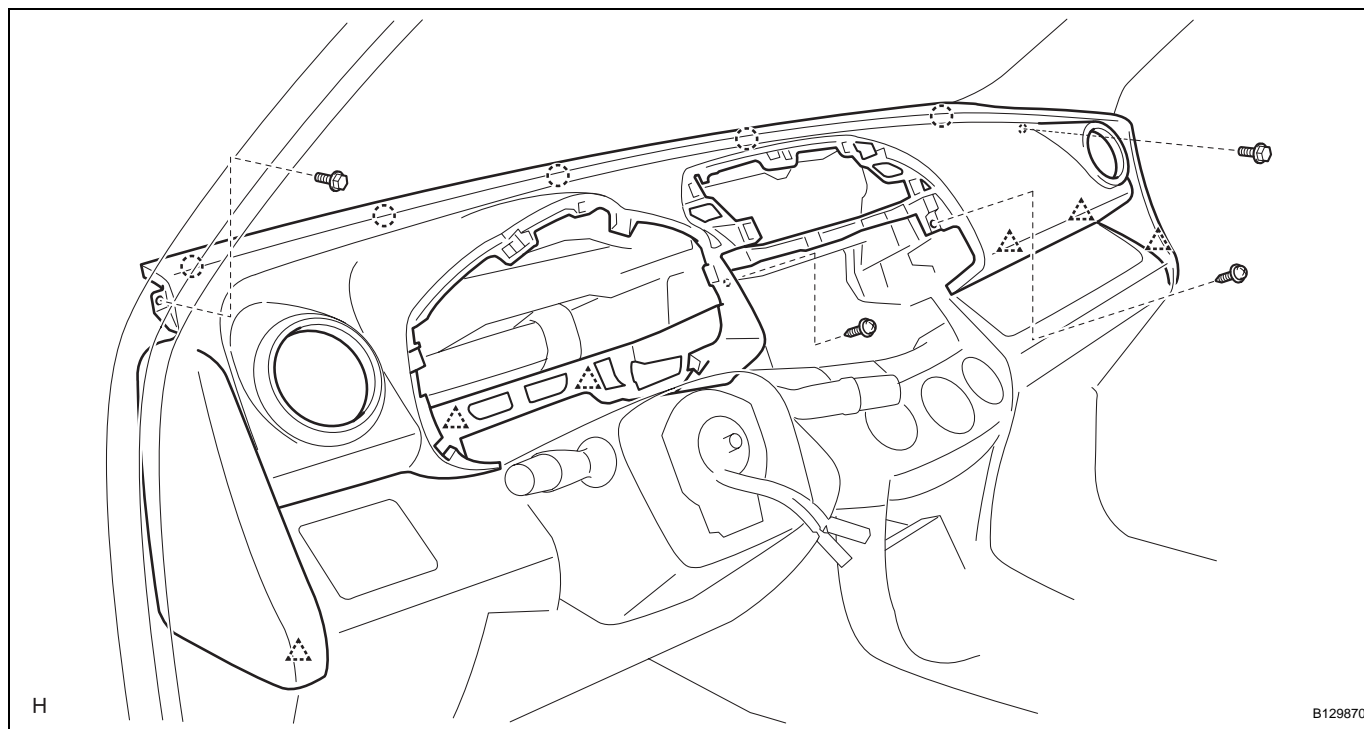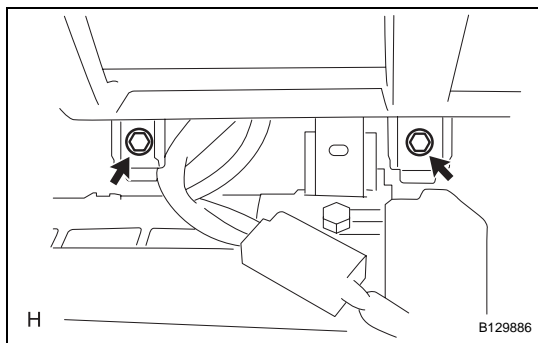


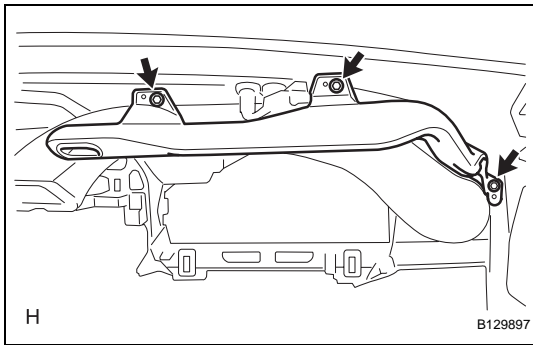

DISASSEMBLY


1. REMOVE NO. 1 SIDE DEFROSTER NOZZLE DUCT

- (a) Remove the 3 screws and duct.

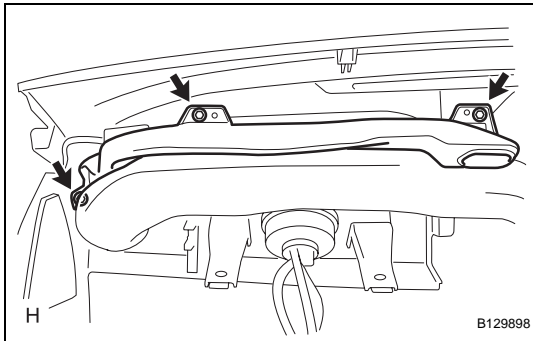


2. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT

- (a) Remove the 3 screws and duct.

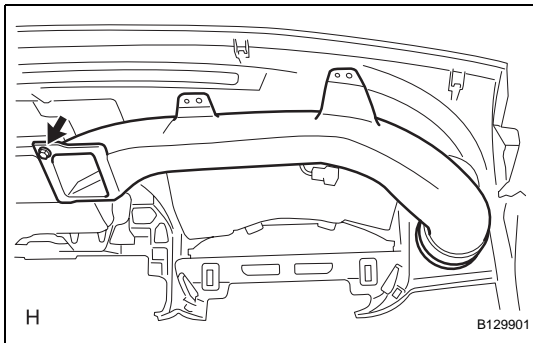


3. REMOVE NO. 1 HEATER TO REGISTER DUCT

- (a) Remove the screw and duct.

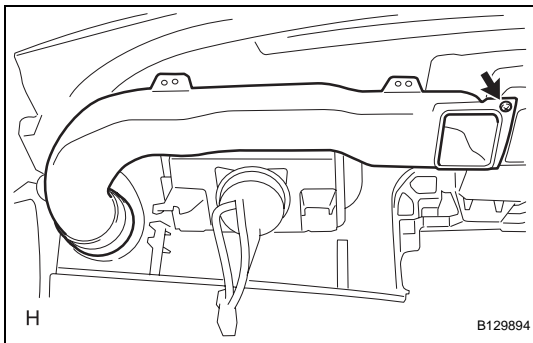

4. REMOVE NO. 2 HEATER TO REGISTER DUCT

- (a) Remove the screw and duct.

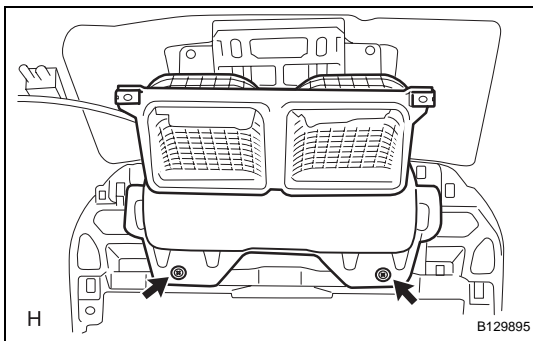

5. REMOVE NO. 3 HEATER TO REGISTER DUCT

- (a) Remove the 2 screws and duct.

6. REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY

7. REMOVE NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY


8. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page [RS-350](#))

9. REMOVE AUTOMATIC LIGHT CONTROL SENSOR
(for Automatic Light Control System)
10. REMOVE COOLER (SOLAR SENSOR) THERMISTOR
(for Automatic Air Conditioning System)


REASSEMBLY

1. **INSTALL COOLER (SOLAR SENSOR) THERMISTOR**
(for Automatic Air Conditioning System)
2. **INSTALL AUTOMATIC LIGHT CONTROL SENSOR**
(for Automatic Light Control System)
3. **INSTALL FRONT PASSENGER AIRBAG ASSEMBLY**
(See page [RS-351](#))
4. **INSTALL NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY**
5. **INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY**
6. **INSTALL NO. 3 HEATER TO REGISTER DUCT**
(a) Install the duct with the 2 screws.


IP

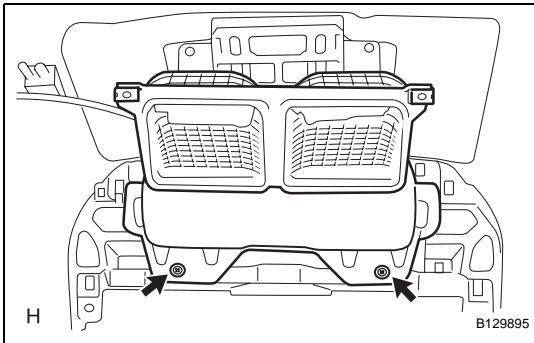


7. **INSTALL NO. 2 HEATER TO REGISTER DUCT**
(a) Install the duct with the screw.

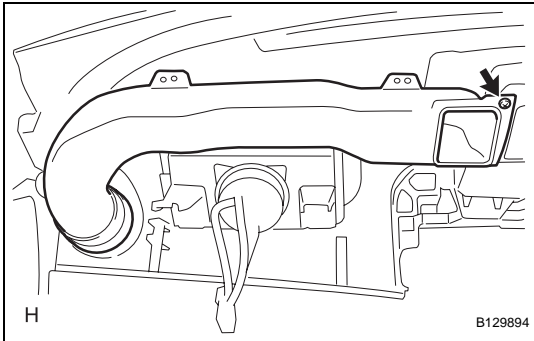


8. **INSTALL NO. 1 HEATER TO REGISTER DUCT**
(a) Install the duct with the screw.

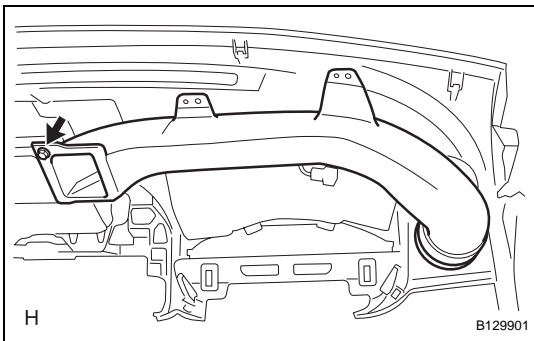

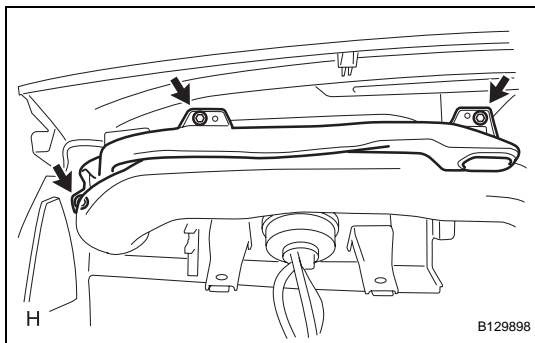**9. INSTALL NO. 2 SIDE DEFROSTER NOZZLE DUCT**

(a) Install the duct with the 3 screws.


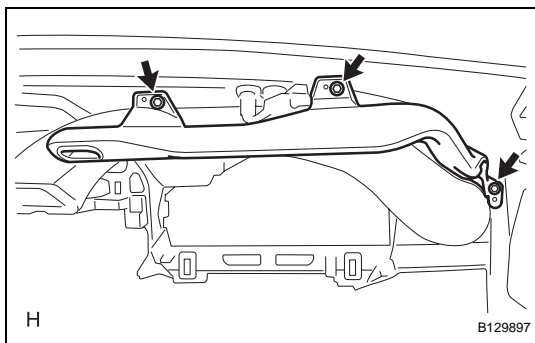
**10. INSTALL NO. 1 SIDE DEFROSTER NOZZLE DUCT**

(a) Install the duct with the 3 screws.

INSTALLATION

1. INSTALL UPPER INSTRUMENT PANEL


- (a) Attach the 6 clips and 5 claws to install the instrument panel.
- (b) Connect the connectors and clamps.
- (c) Install the 2 bolts and 2 screws.

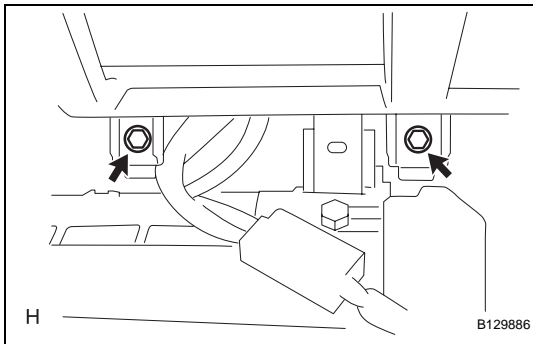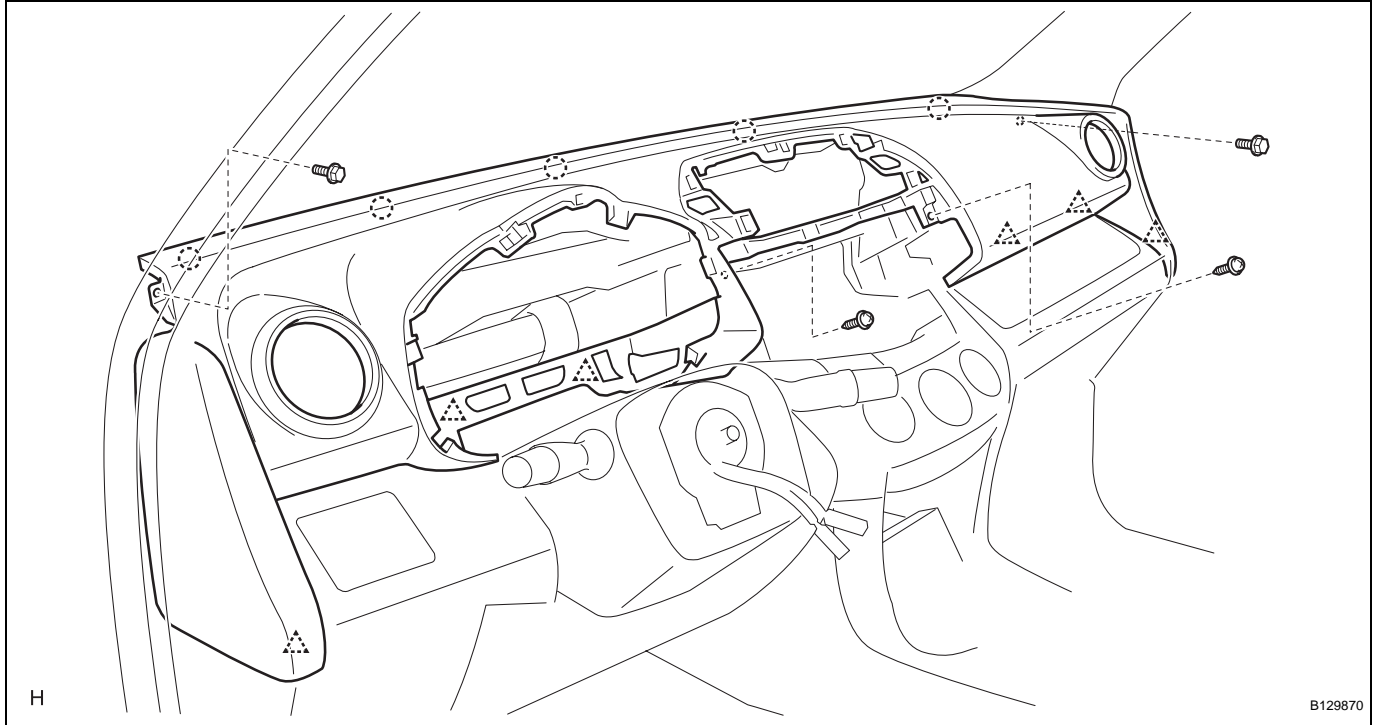

- (d) Connect the passenger airbag connector.

- (e) Install the 2 bolts to the passenger airbag.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)


2. INSTALL FRONT PILLAR GARNISH LH (See page [IR-57](#))
3. INSTALL FRONT PILLAR GARNISH RH (See page [IR-58](#))
4. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-25](#))

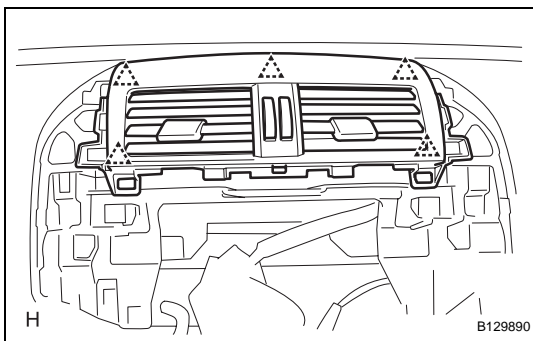


5. INSTALL INSTRUMENT PANEL REGISTER ASSEMBLY CENTER

- (a) Attach the 5 clips to install the instrument panel register.


IP

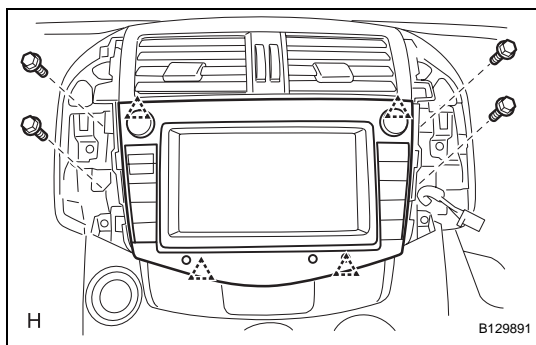**6. INSTALL RADIO RECEIVER**


- (a) Connect the connectors.
- (b) Attach the 4 clips to install the radio receiver.
- (c) Install the 4 bolts.

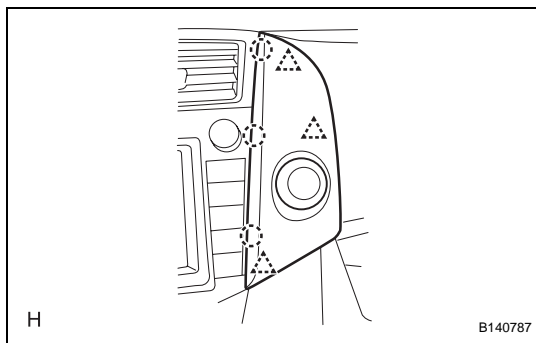**7. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER**


- (a) Connect the connector.
- (b) Attach the 3 clips and 3 claws to install the cluster finish panel.

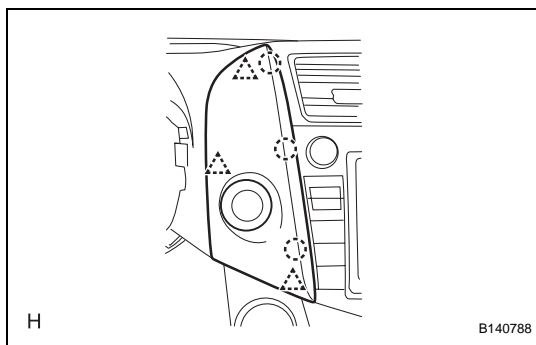**8. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER**

- (a) Connect the connector.
- (b) Attach the 3 clips and 3 claws to install the cluster finish panel.

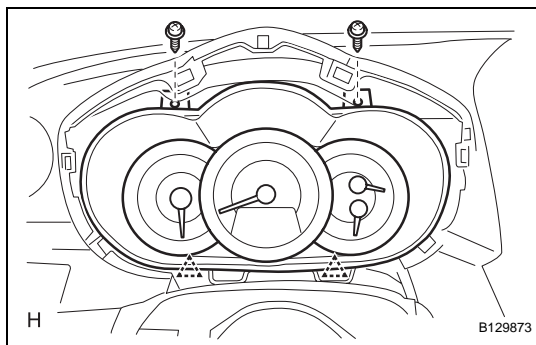**9. INSTALL COMBINATION METER ASSEMBLY**

- (a) Connect the connector.
- (b) Attach the 2 clips to install the combination meter.
- (c) Install the 2 screws.

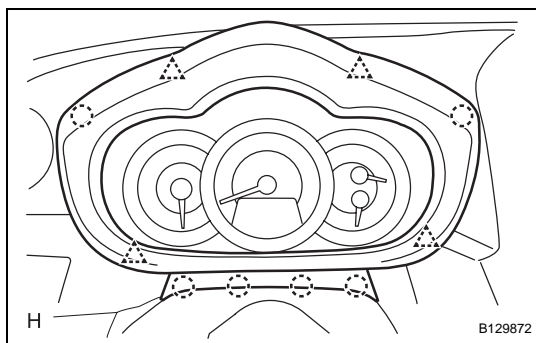**10. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY**

- (a) Attach the 4 clips and 6 claws to install the instrument cluster finish panel.

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**12. CHECK SRS WARNING LIGHT**

- (a) Check the SRS warning light (see page [RS-37](#)).